

TEMPERATURE / HUMIDITY /DEW POINT METER



(

Users Manual

Introduction

Thank you for purchasing the temperature/humidity/dew point meter from us. Please take a few minutes to browse through this user manual before you begin to operate the meter to ensure that you are fully familiarized with how best to operate the meter as accurately and safely as possible.

The meter is a temperature and humidity measuring instrument. It is normally used to measure the humidity and temperature in offices, storerooms, buildings and greenhouses.

1.1 Precautions safety measures

To get the best service from this meter, please read this user's manual carefully and observe the detailed safety precautions strictly.

1.1.1 During use

- Don't touch the humidity sensor.
- Don't expose the sensor to direct light, this causes a false reading.
- 3. Never store the product together with solvents,

acides or other aggressive substances.

1.1.2 Maintaining the product

- Do not measure at a high temperature places.
- When not using the instrument for a long time, please remove the battery and avoid storing in high temperature and high humidity.

■. Features

- 1. Display: 4 digits LCD Display
- 2. Parameters: °C, °F, %RH(relative humidity),

td(dew point temperature)

- 3. Resolution: 0.1℃, 0.1℉, 0.1%RH
- Range: -10 ~ +50°C, +14 ~ +122°F,

 $0 \sim +100\%RH$

- 5. Accuracy: ±1.0°C, ±1.8°F, ±3%RH (5~95%RH)
- 6. Sample rate: 1 time /sec
- 7. auto power off: about 20 minutes
- 8. Operating environment:

9. Storage environment:

- Dimension and Weight (LxWxH) :
- 121x60x30mm (4.76x2.36x1.18 inch),

about 180g (6.34 Ounces)

11. Accessories: DC1.5V (AAA) x 3pcs

String x 1pcs


Users manual x 1pcs

■. Names of parts

- Instrument Familiarization
 - 1. Sensor cover
 - 2. Sensor
 - 3. LCD display
 - 4. Function key



LCD Display

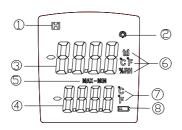

The meaning of the symbols represented by the following:

- 1. Indicating it is now in the data-holding state
- 2. Indication to back light
- 3. Display zone
- 4. Display zone
- 5. Maximum / Minimize
- 6. Humidity units
- 7. Temperature units
- 8. Indication to low voltage of the batteries

. Operation Instruction

*NOTE: In order to ensure the accuracy of the measurement readings, all the interference sources which may affect the measurement results about temperature and humidity (such as the hand) must be away from the sensor.

 Put the instrument with enough battery power in the hand, press the **ON/OFF** key to turn the power on and enter into the measuring mode. The LCD will display the current value of temperature and humidity. The default humidity / temperature unit is % RH / $^{\circ}\mathrm{C}_{\cdot}$

- 2. Press **Unit** key to change the humidity / temperature unit. The adjustable parameters are %RH(relative humidity), td(Dew-point temperature), °C, °F; press the **Mode** and **HOLD** key to change MAX/MIN and HOLD mode.
- 3. Switching the back light on

When the meter is power on, press Light key >2sec. the back light will be turned on, and the icon will display on the LCD. Press the key once >2sec. the light will be turned off, and the icon will disappeared.

If you still need more operations, please see the description of function keys.

. Function keys

1. ON/OFF key

Press the key to turn the power ON and press the key once more >2sec. to turn the power OFF.

2. Mode key

Press the key can select the state of MAX. MIN.

LCD will display the max/min values since the instrument was last switched on or last reset.

3. Unit key

Press the key can change the parameter unit.

Adjustable units: RH/C,td/C,RH/F,td/F.

4. HOLD key

Press the key, a [i] icon will display on the LCD and the readout held in. Press the key once more to cancel the hold function.

Press the key >2sec. the back light will be turned on, and the circum will display on the LCD. Press the key

once >2sec. the light will be turned off, and the icon will disappeared.

5. Auto power off setting

When the meter is powered on, it is under auto power off mode. The meter will power itself off after 20 minutes if no key operation.

Cancelled auto power off function: press **Hold** key when power on until the LCD display **AP OFF**, then press the **Hold** key again to confirm the setting.

. Maintenance

1. CLEANING INSTRUCTIONS

The meter may be wiped down with a wet sponge or cloth using a mild water based detergent or anti-bacterial soap and rinsed under a gentle stream of cold water.

NOTE:

This unit is not designed for complete submersion or washing in water.

2. BATTERY REPLACEMENT

Use the following procedure:

When the battery voltage drop below proper operation range the symbol will appear on the LCD display and the battery need to be replaced.

Press the battery cover and towards arrowhead direction to open the battery cover.

Replace the battery with three new 1.5V batteries (AAA).

Replace the battery cover.

Sifam Tinsley Instrumentation Ltd

1 Warner Drive, Springwood Industrial Estate, Braintree, Essex CM7 2YW

Contact No.: +44 (0) 1376 335271 Email: sales@sifamtinslev.com

www.sifamtinsley.co.uk

