



Multifunction Meters

Transducers & Isolators

Temperature Controllers

Converters & Recorders

Digital Panel Meters

Current Transformers

Analogue Panel Meters

Shunts

Digital Multimeters

Clamp Meters

Insulation Testers

ALPHA 50 MULTIFUNCTION METER (ALPHA SERIES)

User Manual - Issue 1.0



Features

- → True RMS Measurement
- → Onsite Programmable
- → Low Back Depth
- → Phase Reversal Indication
- → Touch screen graphics LCD
- → RS485, Limit or Pulse Output, analog output



Alpha 50 is a compact multifunction instrument with touch screen LCD utility which measures parameters in 3 phase and single phase Network & replaces the multiple analog panel meters.

1. Application

Alpha 50 measures important electrical parameters in 3 phase and single phase Network & replaces the multiple analog panel meters. It measures electrical parameters like AC current, Voltage, frequency, active energy import & active energy export, Current Demand, kW Demand, kVA Demand and Max Current Demand, Max kW Demand and Max kVA Demand. The instrument has optional output as one pulse output or two pulse output for energy measurement.

2. Product Features

Touch screen graphics LCD	Alpha 50 has touch sensible color graphics LCD display with resolution of 320 x 240.
On site programmable PT/CT ratios	It is possible to program primary of external potential Transformer (PT), primary of external Current Transformer (CT) on site locally by entering into Programming mode or remotely via MODBUS (RS485)
User selectable CT Secondary A/1A	The secondary of external Current Transformer (CT) can be programmed on site to either 5A or 1A locally by entering into Programming mode or remotely via MODBUS (Rs485)
User selectable PT Secondary	The secondary of external potential Transformer (PT) can be programmed on site locally by entering into Programming mode or remotely via MODBUS (RS485)
User selectable 3 phase 3W or 4W unbalanced network	User can program on site the network connection as either 3 Phase 3 Wire or 4 Wire locally by entering into Programming mode or remotely via MODBUS (RS485). For single phase applications, single phase version is available.
Low back depth	The instrument has very low back depth (behind the panel) of less than 80 mm in spite of optional features like pulse output
Onsite selection of Auto scroll / Fixed Screen	User can set the display in auto scrolling mode or fixed screen mode can be programmed locally by entering into Programming mode or remotely via MODBUS (RS485)
Phase reversal indication	The instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error message.
Energy measurement (Import and Export)	Active energy (kWh), Reactive energy (kVArh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputs.
True RMS measurement	The instrument measures distorted waveform up to 15th Harmonic.

User selectable Low Current suppression (below 30 mA)	User can suppress the readings below 30 mA in the current measurement by onsite programming if required.	
Phaser Diagram	Pictorial representation of all 3 Phases (Voltage & Current) in terms of vectors.	
Wave Form	Pictorial representation of all 3 phases Current & voltage in terms of sinusoidal waveform.	
Total Harmonic Distortion (THD)	The instrument can measures per phase (%) THD of voltage and (%) THD of current.	
Energy Count storage	In case of power failure, the instrument memorizes the last energy count. Every 40 sec, the instrument updates the energy counter in the nonvolatile memory.	
Programmable Energy format & Energy rollover count	Customer can assign the format for energy display on MODBUS (RS485) in terms of W, kW or MW. Additional to this, customer can also set a rollover count from 7 to 14 digits depending on the energy format.	
Hour Run, ON Hour, Number of Interruptions	Hour run records the number of hours load is connected. ON Hour is the period for which the auxiliary supply is ON. Number of Interruptions indicates the number of times the Auxiliary Supply was interrupted.	
Optional MODBUS (RS485) Output	The optional ModBus output enables the instrument to transmit all the measured parameters over standard MODBUS (RS485).	
User Assignable Registers for MODBUS	Customer can assign MODBUS register address as per his need for faster response time.	
Optional Pulse Output (1 or 2 Relay output) / Limit switch	The instrument can be programmed as Pulse output or Limit Switch.	
Pulse Output	The optional pulse output is a potential free, very fast acting relay contact which can be used to drive an external mechanical counter for energy measurement.	



Product Features


Configuration of the Instrument via MODBUS	The instrument settings can be configured locally by entering inrp Programming mode or remotely via MODBUS (RS485) Note: The MODBUS communication parameters can only be set locally by entering into the Programming mode.
Min Max storage of parameters possible	The instrument stores minimum and maximum values for System Voltage and System Current. Every 40 sec minimum and maximum readings are updated.
Number of parameters measured: more than 46	The instrument measures more than 46 electrical parameters of 3 Phase network.
Parameter Screen recall	In case of power failure, the instrument memorizes the last displayed screen. The displayed screen will get memorized only if user keeps this screen for minimum 40 sec duration before power failure for fixed screen mode.

Limit switch	The instrument will trip the one or two relays if the programmed parameter exceeds the programmed High & Low Limits.
Optional Analog Outputs (1 or 2 Outputs)	1 or 2 Analog outputs can be programmed from a list of input parameters.
Enclosure Protection for dust and water	conforms to IP 54 (front face) as per IEC60529
Compliance to International Safety standards	Compliance to International Safety standard IEC 61010-1-2001
EMC Compatibility	Compliance to International standard IEC 61326

3. Technical Specifications

Reference temperature	23°C +/- 2°C	
Input waveform	Sinusoidal (distortion factor 0.005)	
Input frequency	50 or 60 Hz ±2%	
Auxiliary supply voltage	Rated Value ±1%	
Auxiliary supply frequency	Rated Value ±1%	
Voltage Range	50 100% of Nominal Value. 60 100% of Nominal Value for THD.	
Current Range	10 100% of Nominal Value. 20 100% of Nominal Value for THD	
Power	Cos phu / sin ph = 1 for Active / Reactive Power & Energy. 10 100% of Nominal Current & 50 100% of Nominal Voltage.	
Power Factor / Phase Angle	40 100% of Nominal Current & 50 100% of Nominal Voltage.	
Accuracy		
Voltage	±0.5% of range	
Current	±0.5% of range	
Frequency	±0.15% of mid frequency	
Active Power	±0.5% of range	
Re-Active Power	±0.5% of range	
Apparent Power	±0.5% of range	
Active energy (kWh)	±0.5% of range	
Re Active energy (kVArh)	±0.5% of range	
Apparent energy (kVAh)	±0.5% of range	
Accuracy of Analog Output	1% of O utput end value	
Power Factor	± 1 % of Unity	
Angle	± 1 % of range	
	±1%	

4. Electrical Connections

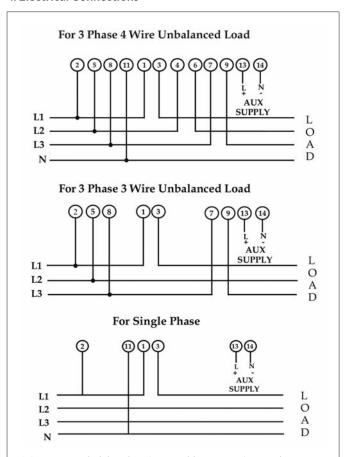


It is ecommended that the wires used for connections to the instrument should have lugs soldered at the end. That is, the connections should be made with Lugged wires for secure connections. The Maximum diameter of the lug should be 7.0mm and maximum thickness 3.5mm. Permissable cross section of the connection wires: <=4.0mm sqr. single wire or 2x2.5mm sqr. fine wire.



Technical Specifications

Input Voltage			
Nominal input voltage (AC RMS)	Phase – Neutral 63.5 / 133 / 239.6 / 254 VL-N		
	Line-Line 110/230/415/ 440 VL-L		
System PT primary values	100VLL to 692kVLL programmable		
	on site.		
Max continuous input	120% of rated value		
voltage Input Current			
Nominal input current	5A AC RMS.		
System CT secondary values	1A & 5A programmable on site.		
System CT primary values	From 1A up to 9999A		
N.A	(for 1 or 5 Amp) 120% of rated value		
Max continuous input current	120% of rated value		
Auxiliary Supply			
ACDC Auxiliary Supply 1	00V 250 VAC DC +/- 10%		
DC Auxiliary Supply	1248 VDC +/- 10%		
AC Auxiliary supply	45 to 66 Hz		
frequency range Overload Withstand			
	2 y retad value for 1 cases d		
Voltage	2 x rated value for 1 second repeated 10 times at 10 second		
	intervals.		
Current	20x rated value for 1 second		
Carrent	repeated 5 times at 5 min		
Operating Measuring Range			
Voltage	5 120% of rated value		
Current	5 120% of rated value		
Frequency	4070 Hz		
Power Factor	0.5 Lag 1 0.8 Lead		
Influence of Variations			
Temperature coefficient	0.025%/°C for Voltage (50 120%		
remperature coemeient	of rated value) and		
	0.05%/°C for Current (10 120%		
	of rated value)		
Environmental	•		
Operating temperature	-20 to +70°C		
Storage temperature	-30 to +80°C		
Relative humidity	0 95% non condensing		
Warm up time	Minimum 3 minute		
Shock	15g in 3 planes		
Vibration	10 55 Hz, 0.15mm amplitude		
	10 33 F12, 0.1311111 amplitude		

5. Dimension Details

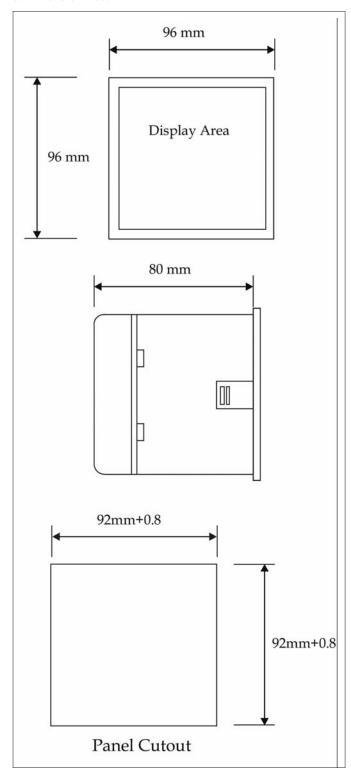



Technical Specifications

Display update rate		
Response time to step input	1 sec approx.	
Applicable Standards		
EMC	IEC 61326	
Immunity	IEC 61000-4-3. 10V/m min – Level 3 industrial low level	
Safety	IEC 61010-1-2001, Permanently connected use	
IP for water & dust	IEC60529	
Pollution degree	2	
Installation category	III	
High Voltage Test	2.2 kV AC, 50Hz for 1 minute between all electrical circuits	
VA Burden		
Nominal input voltage burden	< 0.2 VA approx. per phase	
Nominal input current burden	< 0.6 VA approx. per phase	
Auxillary Supply burden		
For VAC Aux.	< 6.5 VA approx.	
For DC Aux.	< 3 W approx.	

6. Ampere Hour

Default pulse rate	CT secondary = 1A Max pulse rate		
divisor	3600 pulses/Ah *		
	CT secondary = 5A Max pulse rate		
	720 pulses/Ah		
Other Pulse rate			
Divisors (applicable only whe	n Energy on MODBUS (RS485) is in W)		
10	CT secondary = 1A Max pulse rate		
	3600 pulses/10Ah *		
	CT secondary = 5A Max pulse rate		
	720 pulses/10Ah		
100	CT secondary = 1A Max pulse rate		
	3600 pulses/100Ah *		
	CT secondary = 5A Max pulse rate		
	720 pulses/100Ah		
1000	CT secondary = 1A Max pulse rate		
	3600 pulses/1000Ah *		
	CT secondary = 5A Max pulse rate		
	720 pulses/1000Ah		
Pulse duration	60 ms, 100 ms or 200 ms		
*No. of Pulses = Maximum Pulses			
CT Ratio			
Where, CT Ratio = (CT primary/ CT Secondary)			

Energy (can l	be programmed for different energy para	meters simultaneously)		
Relay contact	t	(1NO+1NC)	(1NO+1NC)	
Switching Voltage & current for Relay		240 VDC ,5 A	240 VDC ,5 A	
Default pulse	e rate divisor			
1 per Wh (up to 3600W) 1 per kW		kWh (up to 3600kWh)	1 per MWh (above 3600kW)	
Other Pulse	rate divisors (applicable only when Energ	y on RS485 is in W)	,	
10	1 per 10 Wh (up to 3600W)	1 per 10 kWh (up to 3600kWh)	1 per 10 MWh (above 3600kW)	
100	1 per 100 Wh (up to 3600W)	1 per 100 kWh (up to 3600kWh)	1 per 100 MWh (above 3600kW)	
1000	1 per 1000 Wh (up to 3600W)	1 per 1000 kWh (up to 3600kWh)	1 per 1000 MWh (above 3600kW)	

7. Limit Output Option

Limit can be assigned to different measured parameters. It can be			
configured in one of the four modes given below.			
1)	Hi alarm & Energized Relay		
2)	Hi alarm & De-energized Relay		
3) Lo alarm & Energized Relay			
4)	Lo alarm & De-energized Relay		
With use	With user selectable Trip point, Hysteresis, Energizing delay		
and De-energizing delay.			

8. PT Secondary Ranges for Various Input Voltage

Input Voltage PT Secondary Settable Range			
110V L-L (63.5V L-N)	100V - 120V L-L (57V - 69V L-N)		
230V L-L (133V L-N)	121V - 239V L-L (70V - 139V L-N)		
415V L-L (239.6V L-N)	240V - 480V L-L (140V - 277V L-N)		



9. Electrical Parameters

Sr No	Parameter	3 Phase 4 Wire	3 Phase 3 Wire	1 Phase 2 Wire
1.	System Volts	✓	✓	✓
2.	System Current	✓ /	✓	✓
3.	Volts L1 – N	✓ /	×	×
4.	Volts L2 – N	✓	×	×
5.	Volts L3 – N	/	×	×
6.	Volts L1 – L2	/	/	×
7.	Volts L2 – L3	/	/	×
8.	Volts L3 – L1	/	/	×
9.	Current L1	/	/	×
10.	Current L2	· /	/	×
11.	Current L3	/	/	×
12.	Neutral Current	· /	×	×
13.	Frequency	· ✓	✓ /	✓ /
14.	System Active Power (kW)	√	/	/
15.	Active Power L1 (kW)	√	×	×
16.	Active Power L2 (kW)	✓	×	×
17.	Active Power L3 (kW)	✓	×	×
18.	System Re-active Power (kVAr)	✓	<i>→</i>	<i>^</i>
19.	Re-active Power L1 (kVAr)			
20.		√	×	×
20.	Re-active Power L2 (kVAr)	√	×	X
	Re-active Power L3 (kVAr)	√	×	×
22.	System Apparent Power (kVA)	✓	✓	√
23.	Apparent Power L1 (kVA)	√	×	×
24.	Apparent Power L2 (kVA)	<i>y</i>	X	×
25.	Apparent Power L3 (kVA)	✓	×	×
26.	System Power Factor	✓	✓	✓
27.	Power Factor L1	✓	×	×
28.	Power Factor L2	✓ ·	×	×
29.	Power Factor L3	✓	×	×
30.	Phase Angle L1	✓	×	✓
31.	Phase Angle L2	✓	×	×
32.	Phase Angle L3	✓	×	×
33.	Import kWh (8 digit resolution)	✓	✓	✓
34.	Export kWh (8 digit resolution)	✓	✓	✓
35.	Import kVArh (8 digit resolution)	✓	✓	✓
36.	Export kVArh (8 digit resolution)	✓ /	/	✓
37.	kVAh (8 digit resolution)	✓	✓	✓
38.	KAh (8 digit resolution)	✓ ·	✓	✓
39.	Current Demand	✓ ·	1	1
40.	KVA Demand	✓ ·	/	1
41.	KW Import Demand	✓ ·	/	✓
42.	KW Export Demand	/	/	✓
43.	Max Current Demand	/	1	√
44.	Max KVA Demand	· /	✓	✓ /
45.	Max KW Import Demand	<i>-</i>	/	/
46.	Max KW Export Demand	✓	✓ /	/
47.	Run Hour	· ✓	/	/
48.	On Hour	√	/	/
49.	Number of Interruptions	→	/	/
50.	Phase Reversal Indication	√	×	×
51.	Phaser Diagram (Pictorial Representation)	✓	×	<i>^</i>
52.	VA waveform (Pictorial Representation)	✓ ✓	×	✓ ✓
53.	THD Volts L1-N	✓ ✓	×	×

^{✓-} Available X - Not available



Electrical Parameters

Sr No	Parameter	3 Phase 4 Wire	3 Phase 3 Wire	1 Phase 2 Wire	
55.	THD Volts L3-N	✓	×	×	
56.	THD Volts L1-L2	×	✓	×	
57.	THD Volts L2-L3	×	✓	×	
58.	THD Volts L3-L1	×	✓	×	
59.	THD Current L1	✓	✓	×	
60.	THD Current L2	✓	✓	×	
61.	THD Current L3	✓	✓	×	
62.	THD Voltage Mean	✓	✓	✓	
63.	THD Current Mean	✓	✓	✓	

^{✓-} Available × - Not available

10. Ordering Information

Product Code	AP50-	Х	Х	Х	Х	Х	Х	0000000
System Type	3 Phase	3						
	1 Phase	1						
Input Voltage / Current	110V L-N 1/5A		1					
	230V L-N 1/5A		3					
	110V L-L 1/5A		6					
	220V L-L 1/5A		9					
	230V L-L 1/5A		Α					
	380V L-L 1/5A		С					
	400V L-L 1/5A		D					
	415V L-L 1/5A		Е					
	440V L-L 1/5A		F					
Power Supply	100-250U			U				
	12V-48D			D				
RS 485	With RS 485				R			
	Without RS 485				Z]		
Pulse Output	1 Pulse output					S		
	2 Pulse output					D		
	Pulse O/P not used					Z		
Analog Output	2 outputs (0 - 1mA)						1	
	2 outputs (4 - 20 mA)						2	
	Analog Outputs option not used						Z	



Contact



01376 335271

E-mail: sales@sifamtinsley.com

Tel:

1 Warner Drive Springwood Industrial Estate Braintree, Essex CM7 2YW

www.sifamtinsley.co.uk

Issue 1.0 Alpha Series 7