



# **RTD Process Calibrator**

## **User's MANUAL**

# Safety Information

To avoid possible electric shock or personal injury:

- Never apply more than 30V between any two jacks, or between any jack and earth ground.
- Make sure the battery door is closed and latched before you operate the calibrator.
- Remove test leads from the calibrator before you open the battery door.
- Do not operate calibrator if it is damaged.
- Do not operate the calibrator around explosive gas, vapor, or dust.

To avoid possible damage the calibrator:

- Make sure choose the right jack and rang, before use the calibrator to measurement or calibrator.
- Take away the calibrator from the used circumstance, before operate the calibrator or after close the calibrator.

# Introduction

RTD Process Calibrator is a exactitude measurement and source instrument, it can be use to calibrate the RTD\* transmitter (include most impulse transmitter).

RTD Process Calibrator can measure or simulate 7 difference types of RTD (**°C or °F**), and measure or simulate the Resistance. But it could not use to measurement or source at a same time.

The accessories: 2 pair of test lead and alligator clip, 6 \* AAA 1.5V battery, user's manual.

If the Calibrator is broken or short of some accessories, please contact the supplier.

The following table has showed the technical parameter and function of the Calibrator.

\* **RTD** Resistance Temperature Detector

# Specification

All the specification will under 1 year calibration cycle and temperature between 18~28°C/ 64.4~82.4°F, except addition explain.

## Measure (input)/Simulate (output) Resistance specification

<b>Range</b>	<b>Measure accuracy 4W ± Ω</b>	<b>Simulate accuracy ± Ω</b>	<b>admit excitation mA</b>
<b>0.00Ω ~ 400.00Ω</b>	<b>0.1</b>	<b>0.15</b>	<b>0.1 ~ 0.5</b>
		<b>0.1</b>	<b>0.5 ~ 3.0</b>
<b>400.0Ω ~ 1500.0Ω</b>	<b>0.5</b>	<b>0.5</b>	<b>0.05 ~ 0.8</b>
<b>1500.0Ω ~ 3200.0Ω</b>	<b>1</b>	<b>1</b>	<b>0.05 ~ 0.4</b>
	<b>2</b>		

Admit excitation current only apply on simulate mode. The admit excitation current could be marked on the OHM meter or RTD meter which was connected to the calibrator.

admit excitation current: 0.2mA. MAX input voltage: 30V.

Measure (input)/Simulate (output) RTD specification

Mode	Range	Accuracy °C/°F			admit excitation mA
		Input 4W	Input 2W/3W	Output	
Pt10 385	-200~800°C / -328~1472°F	<b>Not Specified</b>			0.1~3.0
Pt50 385	-200~800°C / -328~1472°F	0.7	1.0	0.7	0.1~3.0
Pt100 385	-200~800°C / -328 ~ 1472°F	0.33	0.5	0.33	0.1~3.0
Pt200 385	-200~250°C / -328~482°F	0.2	0.3	0.2	0.1~3.0
	250~630°C / 482~1166°F	0.8	1.6	0.8	
Pt500 385	-200~500°C / -328~932°F	0.3	0.6	0.3	0.05~0.8
	500~630°C / 932~1166°F	0.4	0.9	0.4	
Pt1000 385	-200~100°C / -328~212°F	0.2	0.4	0.2	0.05~0.8
	100~630°C / 212~1166°F	0.2	0.5	0.2	
Pt100 JIS	-200~630°C / -328~1166°F	0.3	0.5	0.3	0.1~3.0

Admit excitation current only apply on simulate mode. The admit excitation current could be marked on the OHM meter or RTD meter which was connected to the calibrator.

admit excitation current: 0.2mA. MAX input voltage: 30V.

## **General Specifications:**

**Maximum voltage applied between any jack and earth ground or between any tow jack: 30V**

**Resolution: RTD 0.1 °C/°F Resistance 0.01/0.1 Ω**

**Storage temperature: -40°C~60°C (-40°F~140°F)**

**Operating temperature: -10°C~55°C (14°F~131°F)**

**Operating altitude: 3000 meters maximum**

**Temperature coefficient:  $\pm 0.01\%/^{\circ}\text{C}$  on 0°C~18°C (32°F~64.4°F) and 28°C~50°C**

**(82.4°F~122°F)**

**Relative humidity: 95% up to 30°C(86°F), 75% up to 40°C(104°F), 45% up to 50°C(122°F), 35% up to 55°C(131°F)**

**Shock: Random 2g , 5Hz to 500Hz**





**Safety: 1 meter drop test**

**Power requirements: 6 x AAA 1.5V Battery**

**Size: 205mm×98mm×46mm(8.07×3.85×1.81 inch)**

**Weight: 472 g (16.64 Ounces) (include battery)**

## International Symbols


Symbol	Meaning
	Earth ground
	Conforms to European Union directives
	Refer to this instruction sheet for information about this feature.
	Battery

	Double insulation
--	-------------------

## Explanation on Front Panel


The front panel is show as in right figure:

1. 4wire input jack (NC on output)
2. 2wire input/output jack
3. 2wire input/output jack
4. 3wire input jack (NC on output)
5. Power key
6. RTD mode key
7. °C/°F key
8. Input/Output key
9. Increase more value key/wire mode select
10. Reduce more value key/wire mode select

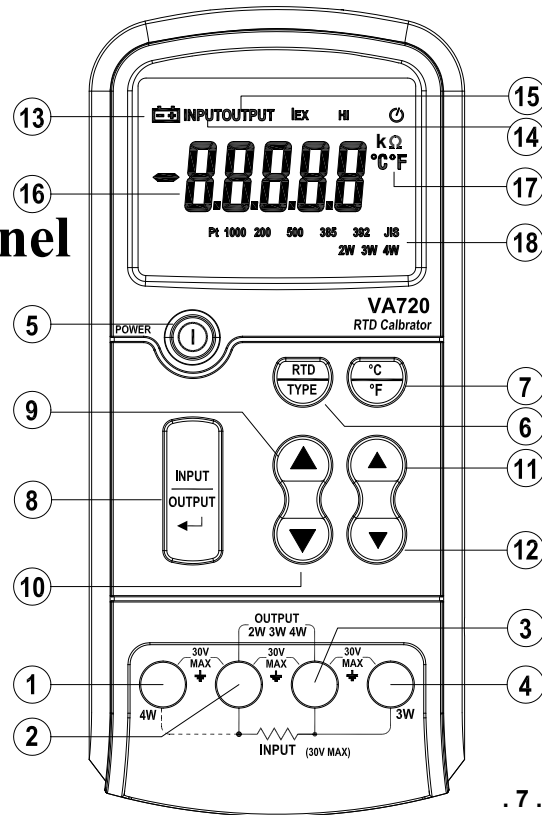




11. Increase less value key
12. Reduce less value key
13. Low power indication
14. Input state indication
15. Output state indication
16. Reading value
17. Unit indication
18. Mode indication

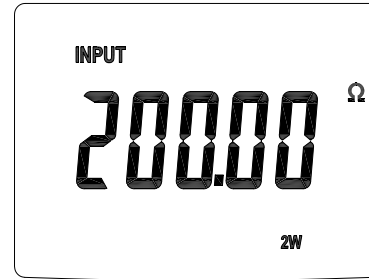


## Operation Instructions

### RTD measurement

- ① Press the power key 5, turn on the calibrator.
- ② Press the Input/Output key 8. When on the input mode.
- ③ Press RTD mode key 6, on the measure type you want.
- ④ Put the RTD or Resistance on the input jack.
- ⑤ If you want to measure with 3W/4W mode, press the wire mode select key 9, 10 to select, and put the wire to the correspond input jack.
- ⑥ Get the reading value 16.

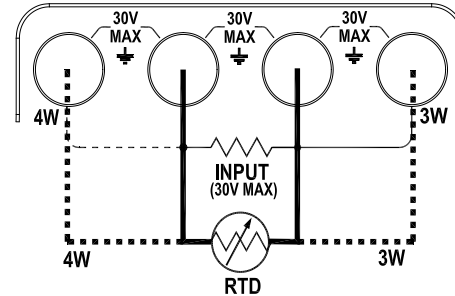


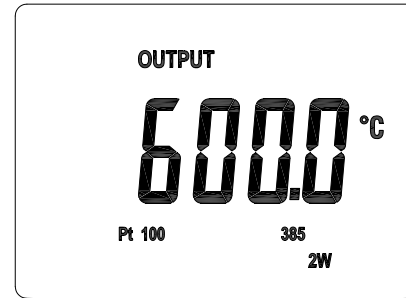

\* The number in the , referring to the “Explanation on Front Panel” (Page7)

### RTD Simulate

- ① Press the power key 5, turn on the calibrator.
- ② Press the Input/Output key 8. When on the output mode.
- ③ Press RTD mode key 6, on the measure type you want.
- ④ Press the adjust value key 9 10 11 12, to let the value on your need.
- ⑤ Put the RTD meter or Resistance meter on the input jack.
- ⑥ If you want to output with 3W/4W mode, put the other wire on the 2wir jack like the left picture.
- ⑦ If you want to change the output value, then press the adjust value key 9 10 11 12, or change to other RTD type use the RTD mode key 6.

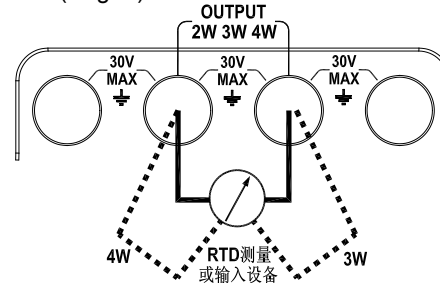


\* The number in the □, referring to the “Explanation on Front Panel” (Page7)

## To use Adapter


### Connecting the power adapter:

- 1, Connect the AC power cord to the AC—DC converter.
- 2, Plug the AC power cord into an electrical outlet(100V-240V).
- 3, Plug the DC power plug of the converter into DC power socket of the meter.

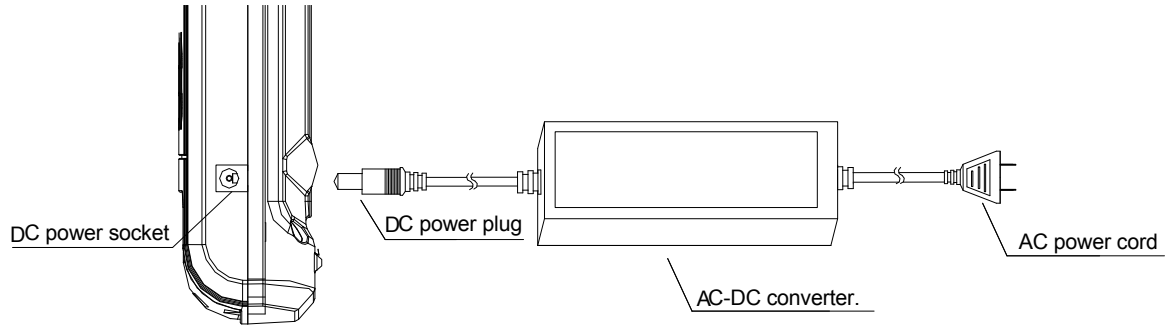

**AC/DC adapter information:**

Input: 100V-240VAC,50-60Hz 1.8A

Output :DC 12V 2A MAX

Polarity : 

**WARNING:**

- 1,Please use the original AC power adapter, using other AC power adapter may damage your instrument.
- 2, The AC power adapter can only be used indoors.
- 3,Please plug the AC power cord into an electrical outlet first and then firmly insert DC plug into

DC input end in the right of the meter. When unplugged, firstly pull out the DC plug perpendicular to DC input end and then unplug the AC plug from the electrical outlet.

- 4, Do not use the AC power adapter in other equipment except this instrument.
- 5, In use, it is a normal phenomenon that the AC power adapter will be hot.
- 6, Do not demolish the AC power adapter. Otherwise, it may be dangerous.
- 7, Do not use the AC power adapter in a high temperature or wet place.
- 8, Please make the AC power adapter avoid a strong bump.
- 9, It is normal when the AC power adapter make some noise in use.

# Maintenance


## Cleaning

Periodically wipe the case with a damp cloth and detergent; do not use abrasives or solvents.

## Calibration

Calibrate your calibrator once a year to ensure that it performs according to its specifications.

## Replacing the Battery

Please change the battery when the LCD indicates .

Turn off the power of the Calibrator, When you change the battery, and screw off the breechblock on the battery cabinet cover, then take off it and instead the fresh AAA 1.5V battery.

---

### **Sifam Tinsley Instrumentation Ltd**

1 Warner Drive, Springwood Industrial Estate,  
Braintree, Essex CM7 2YW

Contact No. : +44 (0) 1376 335271

[Email: sales@sifamtinsley.com](mailto:sales@sifamtinsley.com)

[www.sifamtinsley.co.uk](http://www.sifamtinsley.co.uk)

---