

MULTIFUNCTION METER www.sifamtinsley.co.uk

DATASHEET

Issue 1.1

ALPHA 30A+

Features

→ MODBUS (RS485) Communication (optional)

Alpha 30A+

ST

kVAh Ph Li

> kW PhL

kVAr kVArh

- → Pulse/Limit Switch output (optional)
- → 3 Line 4 Digits ultra bright LED Display (up to 9999)
- → On site Programmable CT/PT Ratios
- → User selectable CT Secondary 1A/5A
- → Measurement & Display of RPM, Run hours, On hours,
- Number of interruption

- Shunts
- **Digital Multimeters**

Multifunction Meters

Transducers & Isolators

Temperature Controllers

Converters & Recorders

Digital Panel Meters

Current Transformers

Analogue Panel Meters

- **Clamp Meters**
- **Insulation Testers**



Application

ALPHA 30A+ measures important electrical parameters like AC Voltage, AC Current, Frequency, Active, Reactive, Apparent Power, Import & Export Energy & many more.



ALPHA 30A+ is a compact multifunction instrument which measures important electrical parameters in 3 phase 4 Wire and 3 phase 3 Wire Network & replaces the multiple analog panel meters.

Product Features

PT/CT ratios potential Transformer (PT), primary of external Current Transformer (CT) on site locally via front panel keys by entering into Programming mode or remotely via MODBUS (R5485) User selectable CT Secondary The secondary of external Current Transformer (CT) can be programmed on site to either 5A or 1A locally via front panel keys by entering into Programming mode or remotely via MODBUS (R5485) User selectable PT Secondary The secondary of external potential Transformer (PT) can be programmed on locally via front panel keys by entering into Programming mode or remotely via MODBUS (R5485) User selectable 3 phase User can program on site the network connection as either 3 Phase 3 Wire or 4 Wire locally via front panel keys by entering into Programming mode or remotely via MODBUS (R5485). For single phase applications, single phase version is available Low back depth The instrument has very low back depth (behind the panel) of 60mm Onsite selection of Auto scroll / Fixed Screen Screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (R5485) Phase reversal indication The instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error message Energy measurement (Import and Export) Active energy (kWh), Reactive energy (kVAch), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputs True RMS measurement The instrument measures distorted waveform up to 15th Harmonic High brightness 3 line 4 digits LED		
Current Transformer (CT) on site locally via front panel keys by entering into Programming mode or remotely via MODBUS (RS485) User selectable CT Secondary 5A/1A The secondary of external Current Transformer (CT) can be programmed on site to either 5A or 1A locally via front panel keys by entering into Programming mode or remotely via MODBUS (Rs485) User selectable PT Secondary The secondary of external potential Transformer (PT) can be programmed on locally via front panel keys by entering into Programming mode or remotely via MODBUS (Rs485) User selectable 3 phase User can program on site the network connection as either 3 Phase 3 Wire or 4 Wire locally via front panel keys by entering into Programming mode or remotely via MODBUS (Rs485). For single phase applications, single phase version is available Low back depth The instrument has very low back depth (behind the panel) of 60mm Onsite selection of Auto scroll / Fixed Screen Screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (Rs485) Phase reversal indication The instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error message Energy measurement (Import and Export) Active energy (kVAh), & Ampere Hour (kAh), Any of the parameters can be freely assigned to 2 optional pulse outputs True RMS measurement The instrument measures distorted waveform up to 15th Harmonic High brightness 3 line 4 digits LED display Simultaneous display of 3 Parameters	On site programmable	It is possible to program primary of external
keys by entering into Programming mode or remotely via MODBUS (RS485)User selectable CT Secondary 5A/1AThe secondary of external Current Transformer (CT) can be programmed on site to either 5A or 1A locally via front panel keys by entering into Programming mode or remotely via MODBUS (Rs485)User selectable PT SecondaryThe secondary of external potential Transformer (PT) can be programmed on locally via front panel keys by entering into Programming mode or remotely via MODBUS (Rs485)User selectable 3 phase 3W or 4WUser can program on site the network connection as either 3 Phase 3 Wire or 4 Wire locally via front panel keys by entering into Programming mode or remotely via MODBUS (Rs485). For single phase applications, single phase version is availableLow back depthThe instrument has very low back depth (behind the panel) of 60mmOnsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (Rs485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kVAh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 ParametersLED displayUser can suppress the readings below 30 mA	PT/CT ratios	
via MODBUS (RS485)User selectable CT Secondary 5A/1AThe secondary of external Current Transformer (CT) can be programmed on site to either 5A or 1A locally via front panel keys by entering into Programming mode or remotely via MODBUS (RS485)User selectable PT SecondaryThe secondary of external potential Transformer (PT) can be programmed on locally via front panel keys by entering into Programming mode or remotely via MODBUS (RS485)User selectable 3 phase 3W or 4WUser can program on site the network connection as either 3 Phase 3 Wire or 4 Wire locally via front panel keys by entering into Programming mode or remotely via MODBUS (RS485).Low back depthThe instrument has very low back depth (behind the panel) of 60mmOnsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (RS485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kVhh), Reactive energy (kVAch), Apparent energy (kVhh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 ParametersUser can suppress the readings below 30 mA		
User selectable CT Secondary 5A/1AThe secondary of external Current Transformer (CT) can be programmed on site to either 5A or 1A locally via front panel keys by entering into Programming mode or remotely via MODBUS (Rs485)User selectable PT SecondaryThe secondary of external potential Transformer (PT) can be programmed on locally via front panel keys by entering into Programming mode or remotely via MODBUS (Rs485)User selectable 3 phase 3W or 4WUser can program on site the network connection as either 3 Phase 3 Wire or 4 Wire locally via front panel keys by entering into Programming mode or remotely via MODBUS (RS485). For single phase applications, single phase version is availableLow back depthThe instrument has very low back depth (behind the panel) of 60mmOnsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (RS485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kWh), Reactive energy (kWAch), Apparent energy (kWAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 ParametersUser can suppress the readings below 30 mA		
5A/1Acan be programmed on site to either 5A or 1A locally via front panel keys by entering into Programming mode or remotely via MODBUS (Rs485)User selectable PT SecondaryThe secondary of external potential Transformer (PT) can be programmed on locally via front panel keys by entering into Programming mode or remotely via MODBUS (Rs485)User selectable 3 phase 3W or 4WUser can program on site the network connection as either 3 Phase 3 Wire or 4 Wire locally via front panel keys by entering into Programming mode or remotely via MODBUS (Rs485).Low back depthThe instrument has very low back depth (behind the panel) of 60mmOnsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (Rs485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kVAh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 ParametersLED displayUser can suppress the readings below 30 mA		
front panel keys by entering into Programming mode or remotely via MODBUS (Rs485)User selectable PT SecondaryThe secondary of external potential Transformer (PT) can be programmed on locally via front panel keys by entering into Programming mode or remotely via MODBUS (Rs485)User selectable 3 phase 3W or 4WUser can program on site the network connection as either 3 Phase 3 Wire or 4 Wire locally via front panel keys by entering into Programming mode or remotely via MODBUS (RS485).Low back depthThe instrument has very low back depth (behind the panel) of 60mmOnsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (RS485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kWh), Reactive energy (kVAoh), Apparent energy (kWA) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 ParametersUser can suppress the readings below 30 mA	User selectable CT Secondary	
remotely via MODBUS (Rs485)User selectable PT SecondaryThe secondary of external potential Transformer (PT) can be programmed on locally via front panel keys by entering into Programming mode or remotely via MODBUS (Rs485)User selectable 3 phase 3W or 4WUser can program on site the network connection as either 3 Phase 3 Wire or 4 Wire locally via front panel keys by entering into Programming mode or remotely via MODBUS (Rs485). For single phase applications, single phase version is availableLow back depthThe instrument has very low back depth (behind the panel) of 60mmOnsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (RS485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kWh), Reactive energy (kVAoh), Apparent energy (kWAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 ParametersUser can suppress the readings below 30 mA	5A/1A	can be programmed on site to either 5A or 1A locally via
User selectable PT SecondaryThe secondary of external potential Transformer (PT) can be programmed on locally via front panel keys by entering into Programming mode or remotely via MODBUS (RS485)User selectable 3 phase 3W or 4WUser can program on site the network connection as either 3 Phase 3 Wire or 4 Wire locally via front panel keys by entering into Programming mode or remotely via MODBUS (RS485). For single phase applications, single phase version is availableLow back depthThe instrument has very low back depth (behind the panel) of 60mmOnsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (RS485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kWh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 Parameters teadings below 30 mA		front panel keys by entering into Programming mode or
can be programmed on locally via front panel keys by entering into Programming mode or remotely via MODBUS (RS485)User selectable 3 phase 3W or 4WUser can program on site the network connection as either 3 Phase 3 Wire or 4 Wire locally via front panel keys by entering into Programming mode or remotely via MODBUS (RS485). For single phase applications, single phase version is availableLow back depthThe instrument has very low back depth (behind the panel) of 60mmOnsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (RS485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kWh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 Parameters teadings below 30 mA		
entering into Programming mode or remotely via MODBUS (RS485)User selectable 3 phase 3W or 4WUser can program on site the network connection as either 3 Phase 3 Wire or 4 Wire locally via front panel keys by entering into Programming mode or remotely via MODBUS (RS485). For single phase applications, single phase version is availableLow back depthThe instrument has very low back depth (behind the panel) of 60mmOnsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (RS485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kWh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 Parameters LED displayUser can suppress the readings below 30 mA	User selectable PT Secondary	
MODBUS (RS485)User selectable 3 phase 3W or 4WUser can program on site the network connection as either 3 Phase 3 Wire or 4 Wire locally via front panel keys by entering into Programming mode or remotely via MODBUS (RS485). For single phase applications, single phase version is availableLow back depthThe instrument has very low back depth (behind the panel) of 60mmOnsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (RS485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kVAh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 Parameters LED displayUser can suppress the readings below 30 mA		
User selectable 3 phase 3W or 4WUser can program on site the network connection as either 3 Phase 3 Wire or 4 Wire locally via front panel keys by entering into Programming mode or remotely via MODBUS (RS485). For single phase applications, single phase version is availableLow back depthThe instrument has very low back depth (behind the panel) of 60mmOnsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (RS485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kVAh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 Parameters LED displayUser can suppress the readings below 30 mA		entering into Programming mode or remotely via
3W or 4Wconnection as either 3 Phase 3 Wire or 4 Wire locally via front panel keys by entering into Programming mode or remotely via MODBUS (RS485). For single phase applications, single phase version is availableLow back depthThe instrument has very low back depth (behind the panel) of 60mmOnsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (RS485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kVAh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 Parameters LeD display below 30 mA		
IncludeInclusionIncludeInclusion		
mode or remotely via MODBUS (RS485). For single phase applications, single phase version is availableLow back depthThe instrument has very low back depth (behind the panel) of 60mmOnsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (RS485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kWh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 Parameters Led usplayUser can suppress the readings below 30 mA	3W or 4W	
phase applications, single phase version is availableLow back depthThe instrument has very low back depth (behind the panel) of 60mmOnsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (RS485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kWh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 Parameters LeD display below 30 mA		, , , , , , , , , , , , , , , , , , , ,
Low back depthThe instrument has very low back depth (behind the panel) of 60mmOnsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (RS485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kVAh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 Parameters Lex schedu so manual schedu schedu so manual schedu sched		
(behind the panel) of 60mmOnsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (RS485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kWh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 Parameters LSP and any and a suppress the readings below 30 mA		
Onsite selection of Auto scroll / Fixed ScreenUser can set the display in auto scrolling mode or fixed screen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (RS485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kWh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 Parameters Ler can suppress the readings below 30 mA	Low back depth	, , , , , , , , , , , , , , , , , , , ,
Fixed Screenscreen mode locally via front panel keys by entering into programming mode or remotely via MODBUS (RS485)Phase reversal indicationThe instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kWh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 Parameters Ler can suppress the readings below 30 mA		
Phase reversal indication programming mode or remotely via MODBUS (RS485) Phase reversal indication The instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error message Energy measurement (Import and Export) Active energy (kWh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputs True RMS measurement The instrument measures distorted waveform up to 15th Harmonic High brightness 3 line 4 digits Simultaneous display of 3 Parameters LED display User can suppress the readings below 30 mA		
Phase reversal indication The instrument can detect wrong phase sequence or failure of one of the input voltages and displays "phase" error message Energy measurement (Import and Export) Active energy (kWh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputs True RMS measurement The instrument measures distorted waveform up to 15th Harmonic High brightness 3 line 4 digits Simultaneous display of 3 Parameters User selectable Low Current User can suppress the readings below 30 mA	Fixed Screen	
failure of one of the input voltages and displays "phase" error messageEnergy measurement (Import and Export)Active energy (kWh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 Parameters us the readings below 30 mA		
error message Energy measurement (Import and Export) Active energy (kWh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputs True RMS measurement The instrument measures distorted waveform up to 15th Harmonic High brightness 3 line 4 digits Simultaneous display of 3 Parameters User selectable Low Current User can suppress the readings below 30 mA	Phase reversal indication	01
Energy measurement (Import and Export) Active energy (kWh), Reactive energy (kVAoh), Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputs True RMS measurement The instrument measures distorted waveform up to 15th Harmonic High brightness 3 line 4 digits Simultaneous display of 3 Parameters User selectable Low Current User can suppress the readings below 30 mA		
Export)Apparent energy (kVAh) & Ampere Hour (kAh). Any of the parameters can be freely assigned to 2 optional pulse outputsTrue RMS measurementThe instrument measures distorted waveform up to 15th HarmonicHigh brightness 3 line 4 digits LED displaySimultaneous display of 3 Parameters User can suppress the readings below 30 mA		0
parameters can be freely assigned to 2 optional pulse outputs True RMS measurement The instrument measures distorted waveform up to 15th Harmonic High brightness 3 line 4 digits Simultaneous display of 3 Parameters User selectable Low Current User can suppress the readings below 30 mA		
outputs True RMS measurement The instrument measures distorted waveform up to 15th Harmonic High brightness 3 line 4 digits Simultaneous display of 3 Parameters LED display User can suppress the readings below 30 mA	Export)	
True RMS measurement The instrument measures distorted waveform up to 15th Harmonic High brightness 3 line 4 digits Simultaneous display of 3 Parameters LED display User can suppress the readings below 30 mA		
High brightness 3 line 4 digits Simultaneous display of 3 Parameters LED display User can suppress the readings below 30 mA		
High brightness 3 line 4 digits Simultaneous display of 3 Parameters LED display User can suppress the readings below 30 mA	Irue RMS measurement	
LED display User selectable Low Current User can suppress the readings below 30 mA		
User selectable Low Current User can suppress the readings below 30 mA		Simultaneous display of 3 Parameters
	1 2	
suppression (below 30 mA) in the current measurement by onsite programming	suppression (below 30 mA)	
if required.		if required.





Total Harmonic Distortion (THD)	The instrument can measure per phase THD of voltage and THD of current
Energy Count storage	In case of power failure, the instrument memorizes the
	last energy count. Every 40 sec, the instrument updates
	the energy counter in the nonvolatile memory
Programmable Energy format	Customer can assign the format for energy
& Energy rollover count	display on MODBUS (RS485) in terms of W, kW or MW.
a Energy reliever obtain	Additional to this, customer can also set a rollover coun
	from 7 to 14 digits (for W), 7 to 12 digits (for kW) 7
	to 9 digits (for MW), after which the energy will roll back
	to zero. The above settings are applicable for all types
	of energy
Hour Run, ON Hour, Number of	Hour run records the number of hours load
Interruptions	is connected. ON Hour is the period for which the
	auxiliary supply is ON. Number of Interruptions indicates
	the number of times the Auxiliary Supply was interrupted
Optional MODBUS (RS485) Output	The optional ModBus output enables the instrument to
	transmit all the measured parameters over standard
	MODBUS (RS485)
User Assignable Registers for	Customer can assign MODBUS register address as
MODBUS	per his need for faster response time
Optional Pulse Output (1 or 2 Relay	The instrument can be programmed as Pulse
output) /Limit switch	output or Limit Switch
Pulse Output	The optional pulse output is a potential free, very fast
	acting relay contact which can be used to drive an
	external mechanical counter for energy measurement
Limit Switch	The instrument will trip the one or two relays if the
	programmed parameter exceeds the programmed
	High & Low Limits
Configuration of the Instrument	The instrument settings can be configured locally via
via MODBUS	front panel keys by entering into Programming mode
	or remotely vis MODBUS (Rs485).
	Note: the MODBUS communication parameters can
only be set locally via front panel keys	
	Programming mode
Min Max storage of parameters	The instrument stores minimum and maximum values
possible	for System Voltage and System Current. Every 40 sec
poolbio	minimum and maximum readings are updated.
Number of parameters measured	The instrument measures more than 46 electrical
more than 46	parameters of 3 Phase network
Parameter Screen recall	In case of power failure, the instrument memorizes the
	last displayed screen. The displayed screen will get
	memorized only if user keeps this screen for minimum 4
	sec duration before power failure for fixed screen mode
Optional Analog Outputs	1 or 2 Analog outputs can be programmed from a
(1 or 2 Outputs)	list of input parameters
Ethernet Interface (Modbus	The optional Ethernet Interface output transmit all the
TCP/IP Protocol)	measured parameters on MODBUS TCP/IP. Also
	user can configure their instrument via Ethernet Interfac
Enclosure Protection for	Conforms to IP 54, IP 65(optional) (front face)
	as per IEC60529
dust and water	
Compliance to International	Compliance to International Safety standard



Technical Specifications

Reference conditions for Accuracy			
Reference temperature	23°C +/- 2°C		
Input waveform	Sinusoidal (distortion factor 0.005)		
Input frequency	50 or 60 Hz ±2%		
Auxiliary supply voltage	Rated Value ±1%		
Auxiliary supply frequency	Rated Value ±1%		
Voltage Range	50 100% of Nominal Value.		
	60 100% of Nominal Value foo THD.		
Current Range	10 100% of Nominal Value.		
	20 100% of Nominal Value foo THD.		
Power	Cos phi / sin phi = 1 for Active/		
	Reactive Power I Energy.		
	10 100% of Nominal Current &		
	50 100% of Nominal Voltage.		
Power Factor / Phase Angle	40 100% of Nominal Current &		
	50 100% of Nominal Voltage.		

Applicable Standards

IEC 61326
IEC 61000-4-3. 10V/m min – Level 3 industrial low level
IEC 61010-1-2010, Permanently connected use
Front IP 54, Front(Optional) IP65
Back IP 20, as per IEC60529
2
3.7 kV AC, for 1 minute

Accuracy

Parameter	Accuracy
Voltage	± 0.5% of Nominal value
Current	± 0.5% of Nominal value
Frequency	± 0.15% of mid frequency
Active Power	± 0.5% of Nominal value
Re-Active Power	± 0.5% of Nominal value
Apparent Power	± 0.5% of Nominal value
Active energy (kWh)	± 0.5% of Nominal value
Re Active energy (kVArh)	± 0.5% of Nominal value
Apparent energy (kVAh)	± 0.5% of Nominal value
Accuracy of Analog Output	1 % of Output end value
Power Factor	±1% of Unity
Angle	±1% of range
Total Harmonic Distortion	±2%
Neutral current	±4% of range

Note- Measurement error is normally much less than the error specified in technical specification. Variation due to influence quantity is less than twice the errors allowed for reference condition.

Input Voltage

Nominal input voltage (AC RMS)	Phase –Neutral 63.5 / 133 / 239.6 / 288.6 VL-N Line-Line 110 / 230 / 415 / 500 VL-L
System PT primary values	100VLL to 692kVLL programmable on site
Max continuous input voltage	120% of rated value

Input Current

Nominal input current	5A AC RMS.
System CT secondary values	1A & 5A programmable on site
System CT primary values	From 1A up to 9999A (for 1 or 5 Amp)
Max continuous input current	120% of rated value



MULTIFUNCTION METER

Auxiliary Supply			
Higher Auxiliary Supply	60V 300 VAC DC		
Higher Aux Nominal Value	230 V AC, 50/60 Hz / 230 V DC		
Lower Auxiliary Supply	2060 V DC / 2040 V AC		
Lower Aux Nominal Value	48 V DC / 24 V AC, 50/60 Hz		
Aux. supply	45 to 65 Hz		
VA Burden			
Nominal input voltage burden	< 0.2 VA approx. per phase		
Nominal input current burden	< 0.6 VA approx per phase		
Auxillary Supply burden	< 5 VA for AC aux		
5 11 5	< 4 W for DC aux		
Overload Withstand			
Voltage	2 x rated value for 1 second, repeated 10 times at 10		
0	second intervals		
Current	20 x rated value for 1 second, repeated 5 times at 5 mi		
	intervals		
Operating Measuring Ranges			
Voltage	10 120% of rated value		
Current	5 120% of rated value		
Frequency	4070 Hz		
Power Factor	0.5 Lag 1 0.8 Lead		
Influence of Variations			
Temperature coefficient	0.05%/°C for Voltage (50120% of rated value)		
	0.05%/°C for Current (10120% of rated value)		
Display update rate			
Response time to step input	1 sec approx		
Ampere Hour			
Default pulse rate	CT secondary = 1A Max pulse rate 3600 pulses/Ah*		
Divisor	CT secondary = 5A Max pulse rate 720 pulses/Ah		
Other Pulse rate divisors (applicable	only when Energy on RS485 is in W):		
10	CT secondary = 1A Max pulse rate 3600 pulses/10Ah*		
	CT secondary = 5A Max pulse rate 720 pulses/10A		
100	CT secondary = 1A Max pulse rate 3600 pulses/100Ar		
	CT secondary = 5A Max pulse rate 720 pulses/100Ah		
1000	CT secondary = 1A Max pulse rate 3600 pulses/1000A		
	CT secondary = 5A Max pulse rate 720 pulses/1000Ar		
Pulse duration	60 ms, 100 ms or 200 ms		
*No. of Pulses = Maximum Pulses			
CT Ratio			
Where, CT Ratio = (CT primary/ CT :	Secondary)		
DT Cocondom Dominio for M	s Input Voltage		
r i Secondary Randes for Variou			
PT Secondary Ranges for Variou Input Voltage	PT Secondary Settable Range		
Input Voltage	PT Secondary Settable Range 100V – 120V L-L (57V – 69V L-N)		
Input Voltage 110V L-L (63.5V L-N)	100V – 120V L-L (57V – 69V L-N)		
Input Voltage 110V L-L (63.5V L-N) 230V L-L (133V L-N)	100V – 120V L-L (57V – 69V L-N) 121V – 239V L-L (70V – 139V L-N)		
Input Voltage 110V L-L (63.5V L-N)	100V - 120V L-L (57V - 69V L-N) 121V - 239V L-L (70V - 139V L-N) 240V-480V L-L (140V - 288.6V L-N)		
Input Voltage 110V L-L (63.5V L-N) 230V L-L (133V L-N)	100V - 120V L-L (57V - 69V L-N) 121V - 239V L-L (70V - 139V L-N) 240V-480V L-L (140V - 288.6V L-N) PT secondary is settable upto 500VL-L by modbus		
Input Voltage 110V L-L (63.5V L-N) 230V L-L (133V L-N) 415V L-L (239.6V L-N)	100V - 120V L-L (57V - 69V L-N) 121V - 239V L-L (70V - 139V L-N) 240V-480V L-L (140V - 288.6V L-N)		
Input Voltage 110V L-L (63.5V L-N) 230V L-L (133V L-N) 415V L-L (239.6V L-N) Limit Output Option	100V - 120V L-L (57V - 69V L-N) 121V - 239V L-L (70V - 139V L-N) 240V-480V L-L (140V - 288.6V L-N) PT secondary is settable upto 500VL-L by modbus communication		
Input Voltage 110V L-L (63.5V L-N) 230V L-L (133V L-N) 415V L-L (239.6V L-N) Limit Output Option Limit can be assigned to different me	100V - 120V L-L (57V - 69V L-N) 121V - 239V L-L (70V - 139V L-N) 240V-480V L-L (140V - 288.6V L-N) PT secondary is settable upto 500VL-L by modbus		
Input Voltage 110V L-L (63.5V L-N) 230V L-L (133V L-N) 415V L-L (239.6V L-N) Limit Output Option Limit can be assigned to different me four modes given below.	100V - 120V L-L (57V - 69V L-N) 121V - 239V L-L (70V - 139V L-N) 240V-480V L-L (140V - 288.6V L-N) PT secondary is settable upto 500VL-L by modbus communication		
Input Voltage 110V L-L (63.5V L-N) 230V L-L (133V L-N) 415V L-L (239.6V L-N) Limit Output Option Limit can be assigned to different me four modes given below. 1) Hi alarm & Energized Relay	100V - 120V L-L (57V - 69V L-N) 121V - 239V L-L (70V - 139V L-N) 240V-480V L-L (140V - 288.6V L-N) PT secondary is settable upto 500VL-L by modbus communication		
Input Voltage 110V L-L (63.5V L-N) 230V L-L (133V L-N) 415V L-L (239.6V L-N) Limit Output Option Limit can be assigned to different me four modes given below.	100V - 120V L-L (57V - 69V L-N) 121V - 239V L-L (70V - 139V L-N) 240V-480V L-L (140V - 288.6V L-N) PT secondary is settable upto 500VL-L by modbus communication		

With user selectable Trip point, Hysteresis, Energizing delay and De-energizing delay.



MULTIFUNCTION METER


Environmental			
Operating temperature	-20 to +70°C		
Storage temperature	-30 to +80°C		
Relative humidity	0 90% non condensing		
Warm up time	Minimum 3 minute		
Shock 15g in 3 planes			
Vibration	10 55 10 Hz, 0.15mm amplitude		
Pulse output			
Energy (can be programmed for different energy parameters simultaneously)			
Relay contact (1NO+1NC)			
Switching Voltage I current for Relay 240 VAC ,5 A			

ſ	Default pulse rate divisor					
	1 per	Wh (up to 3600W) 1	per kWh (up to 3600kWh)	1 per MWh (above 3600kW)		
	Other Pulse rate divisors (applicable only when Energy on RS485 is in W)					
	10 1 per 10 Wh (up to 3600W)		1 per 10 kWh (up to 3600kWh)	1 per 10 MWh (above 3600kW)		
	100	1 per 100 Wh (up to 3600W)	1 per 100 kWh (up to 3600kWh)	1 per 100 MWh (above 3600kW)		
ſ	1000	1 per 1000 Wh (up to 3600W)	1 per 1000 kWh (up to 3600kWh	1 per 1000 MWh (above 3600kW)		


Pulse Duration 60 ms, 100 ms, 200 ms

Above options are also applicable to Apparent and Reactive Energy.

Electrical Connections

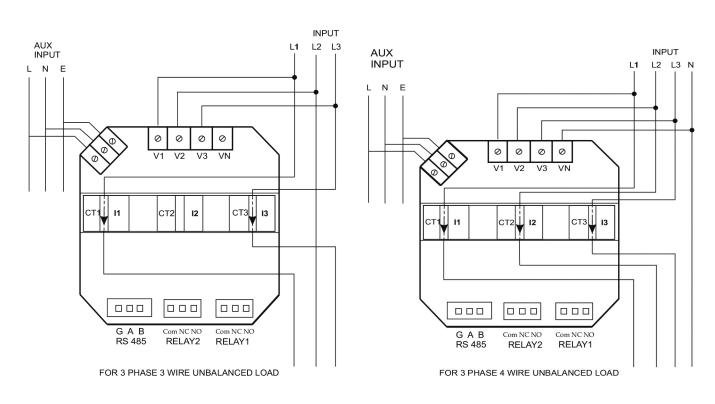




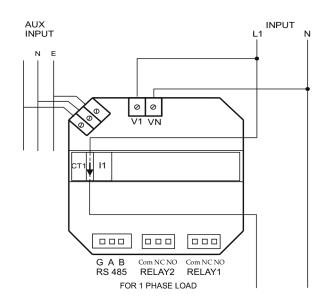

It is recommended that the wires used for connections to the instrument should have lugs soldered at the end. That is, the connections should be made with Lugged wires for secure connections. The Maximum diameter of the lug should be 7.0mm and maximum thickness 3.5mm. Permissable cross section of the connection wires <=4.0mm² single wire or 2 x 2.5mm² fine wire.

Dimension Details

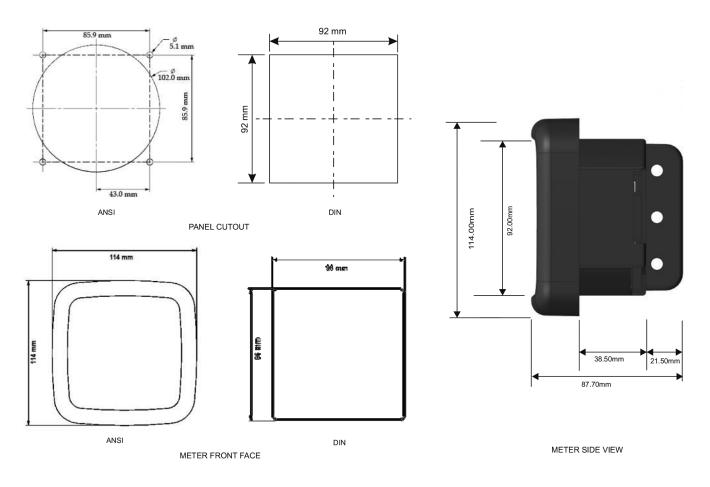



Parameter Measurement and Display

Sr No	Displayed Parameters	3 Phase 4Wire	3Phase 3Wire	Single Phase 2W
1.	System Volts	✓	✓	✓
2.	System Current	✓	✓	✓
3.	Volts L1 – N	✓	×	×
4.	Volts L2 – N	✓	×	×
5.	Volts L3 – N	✓	×	×
6.	Volts L1 – L2	✓	✓	×
7.	Volts L2 – L3	✓	✓	×
8.	Volts L3 - L1	✓	✓	×
9.	Current L1	✓	✓	×
10.	Current L2	✓	✓	×
11.	Current L3	✓	✓	×
12.	Neutral Current	✓	×	×
13.	Frequency	✓	✓	√
14.	System Active Power (kW)	✓	✓	✓
15.	Active Power L1 (kW)	✓	×	×
16.	Active Power L2 (kW)	✓	×	×
17.	Active Power L3 (kW)	✓	×	×
18.	System Re-active Power (kVAr)	✓	✓	✓
19.	Re-active Power L1 (kVAr)	✓	×	×
20.	Re-active Power L2 (kVAr)	✓	×	×
21.	Re-active Power L3 (kVAr)	✓	×	×
22.	System Apparent Power (kVA)	✓	✓	✓
23.	Apparent Power L1 (kVA)	✓	×	×
24.	Apparent Power L2 (kVA)	✓	×	×
25.	Apparent Power L3 (kVA)	✓	×	×
26.	System Power Factor	√	✓	✓
27.	Power Factor L1	√	×	×
28.	Power Factor L2	√	×	×
29.	Power Factor L3	√	×	×
30.	Phase Angle L1	√	×	✓
31.	Phase Angle L2	√	×	×
32.	Phase Angle L3	√	×	×
33.	Import kWh (8 digit resolution)	√	✓	✓
34.	Export kWh (8 digit resolution)	✓ ✓	✓	✓
35.	Import kVArh (8 digit resolution)	✓ ✓	✓	✓
36.	Export kVArh (8 digit resolution)	✓	✓	✓
37.	kVAh (8 digit resolution)	✓	✓	✓
38.	KAh (8 digit resolution)	√	✓	✓
39.	Current Demand	√	✓	✓
40.	KVA Demand	√	✓	✓
41.	KW Import Demand	· · · · · · · · · · · · · · · · ·	✓	·
42.	KW Export Demand	· · · · · · · · · · · · · · · · ·	✓	·
43.	Max Current Demand	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·
44.	Max KVA Demand	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·
45.	Max KW Import Demand	· · · · · · · · · · · · · · · · · · ·	✓ ·	 ✓
46.	Max KW Export Demand	· · · · · · · · · · · · · · · · · · ·	✓ ·	· · · · · · · · · · · · · · · · · · ·
47.	Run Hour	· · · · · · · · · · · · · · · · · · ·	✓	· · · · · · · · · · · · · · · · · · ·
48.	On Hour	· · · · · · · · · · · · · · · · · · ·	✓ ✓	· · · · · · · · · · · · · · · · · · ·
40. 49.	Number of Interruptions	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·
<u>49.</u> 50.	Phase Reversal Indication	· · · · · · · · · · · · · · · · · · ·	✓ ✓	✓ ✓
50.	THD Volts L1-N	✓ ✓	×	×
51.	THD Volts L2-N		× ×	×
52. 53.	THD Volts L2-N THD Volts L3-N	✓	*	×
	THD Volts L3-IN THD Volts L1-L2		× √	-
54.	- Not available	*	v	×

🗸 - Available 🗴 - Not available



Sr No	Displayed Parameters	3 Phase 4Wire	3Phase 3Wire	Single Phase 2W
55.	THD Volts L2-L3	×	\checkmark	×
56.	THD Volts L3-L1	×	✓	×
57.	THD Current L1	✓	~	×
58.	THD Current L2	✓	\checkmark	×
59.	THD Current L3	✓	~	×
60.	THD Voltage Mean	✓	~	✓
61.	THD Current Mean	✓	\checkmark	✓

✓ - Available × - Not available



Ordering Information

Product Code	ALPHA 30A+	x	x	x	x	x	x	000000
System Type	3 Phase	3						
	1 Phase	1]					
Input Voltage / Current	115V L-N 1/5A		1					
	220V L-N 1/5A		2					
	230V L-N 1/5A		3					
	240V L-N 1/5A		4					
	100V L-L 1/5A		5					
	110V L-L 1/5A		6					
	200V L-L 1/5A		7					
	208V L-L 1/5A		8					
	230V L-L 1/5A		9					
	240V L-L 1/5A		Α					
	380V L-L 1/5A		В					
	400V L-L 1/5A		С					
	415V L-L 1/5A		D					
	500V L-L 1/5A		Е					
Power Supply	60-300V AC/DC,			-				
	45-65Hz			Η				
	20-40Vac 45- 65 Hz or			L				
	20-60Vdc			L				
RS 485	With RS 485				R			
	Without RS 485				Z			
Pulse Output	1 Pulse output					S		
	2 Pulse output					D		
	Pulse O/P not used					Z		
Analog Output	2 outputs (0 – 1mA)						1	
	2 outputs (4 – 20 mA)						2	
	Analog Outputs option not used						Z	

Note- Impulse Output is not available in case of analog output option



Contact



Sifam Tinsley Instrumentation Ltd

1 Warner Drive Springwood Industrial Estate Braintree, Essex CM7 2YW Tel: 01376 335271 E-mail: sales@sifamtinsley.com

www.sifamtinsley.co.uk